

### Application Information

---

#### Stroboscope Remote Indicator

Read strobe flash rate (FPM) when display panel is obscured from view.

Provides a means to read the actual strobe display when the strobe may be mounted in a position over head or at a angle were the operator cannot view the display. Panel meter reads actual display of stroboscope. Panel meters DT-5TS indicator or DT-5TXR with additional optional outputs (4-20 ma, 1-5vdc etc and /or a triple form C relays for annunciation).

Accessories: SAS-DT300 Swing Arm (to hold Strobe in various positions)

#### Equipment Used

- Stroboscopes: DT-311A, DT-315A, or DT 315AEB
- Panel Tachometers: DT-5TXR or DT-5TS
- Sync Cable: CABLE-311TACH (strobe to tach)

